

Instructions for Importing Vehicle Analysis Templates

The following .xml file is available for download on MDT's Load Rating Website:

◆ MDT Vehicle Analysis Templates

Includes the following:

■ MDT ASR/LFR Rating Template

 
- AASHTO HS 20-44 Inventory/Operating, plus inventory/operating levels for all legal loads (Type 3, Type 3S2, Type 3-3, SU4, SU5, SU6, SU7, EV2, EV3)
- References AASHTOWare BrR standard library vehicle definitions

■ MDT LFR Rating Template


- AASHTO HL-93 Inventory/Operating, plus all legal loads ((Type 3, Type 3S2, Type 3-3, SU4, SU5, SU6, SU7, EV2, EV3)
- References MDT Agency-Defined vehicles for EV2 and EV3, and AASHTOWare BrR standard library vehicle definitions for others

***Note – must import MDT's Agency-Defined vehicles first*

1. From the Bridge Explorer window , select **File** → **Import System Data**

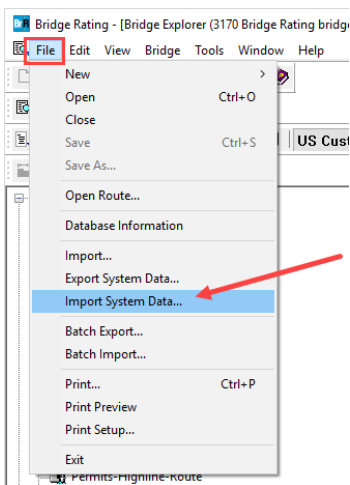


 2. Navigate to the location where .xml was downloaded. (*Tip – if the .xml file is not visible, make sure it's extracted from the zipped folder*). Select the template to be imported and click **Open**

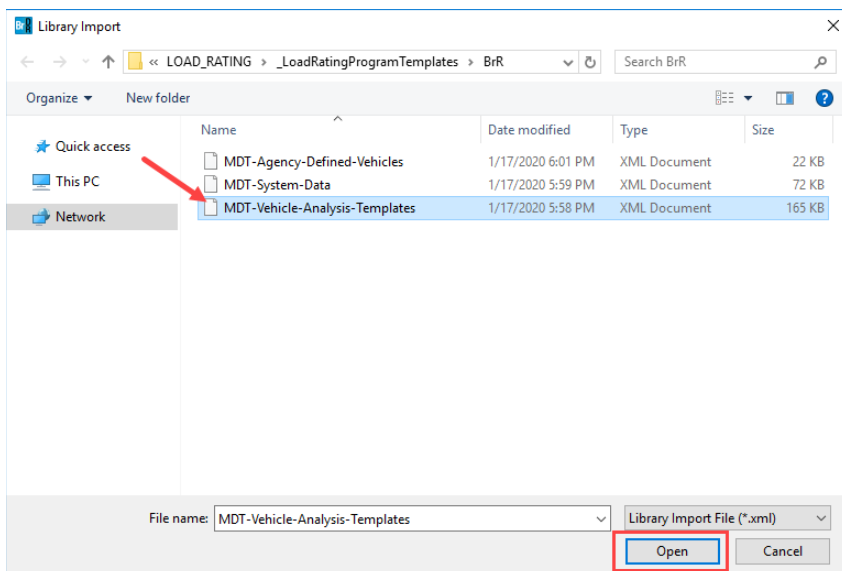



Instructions for Importing Vehicle Analysis Templates

 - Under the “System Data Items” column, select the **Analysis Event Template** folder.

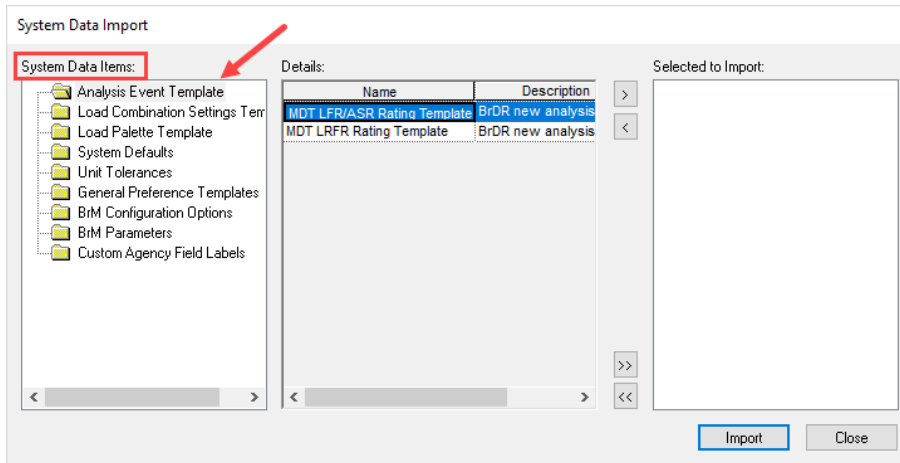

 - Click on the double arrows to import all templates in the folder. (Tip – single arrows will import only the highlighted template). Click **Import**.

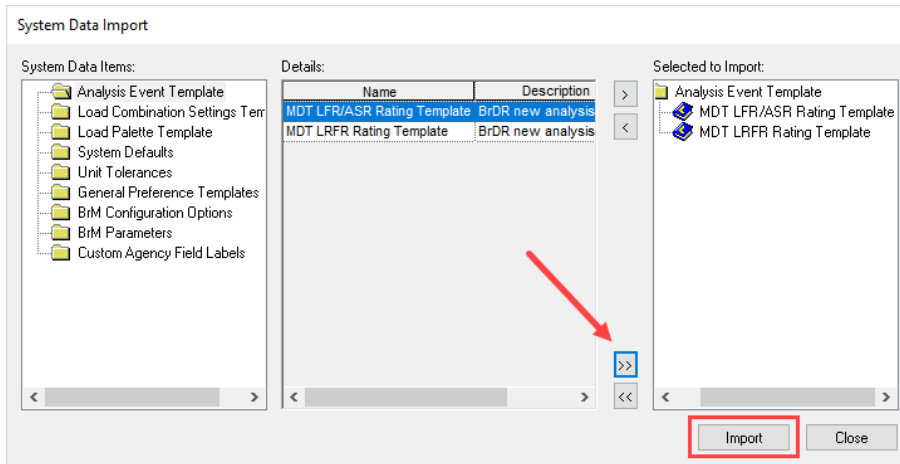

- If successful, the imported template will be a visible option in the Rate window  → **Open Template**

