


Instructions for Importing System Data

The following .xml file is available for download on MDT's Load Rating Website:


◆ MDT System Data

- Includes the following:
 - *Unit Tolerances*
 - *BrM Parameters (i.e. pulldown menus in General Bridge Description)*
 - *Admin Area*
 - *County*
 - *Owner/Maintainer (Custodian)*
 - *District*
 - *Functional Class*
 - *NHS Indicator*
 - *Custom Agency Field Labels*

1. From the Bridge Explorer window , select **File** → **Import System Data**


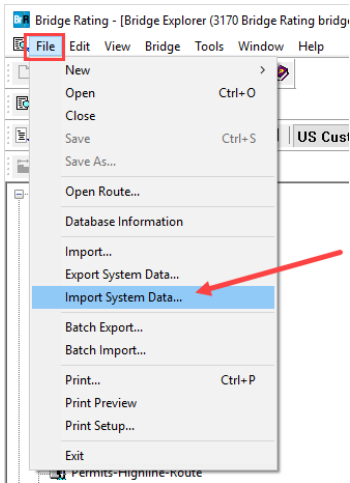



2. Navigate to the location where .xml was downloaded. (*Tip – if the .xml file is not visible, make sure it's extracted from the zipped folder*). Select the template to be imported and click **Open**

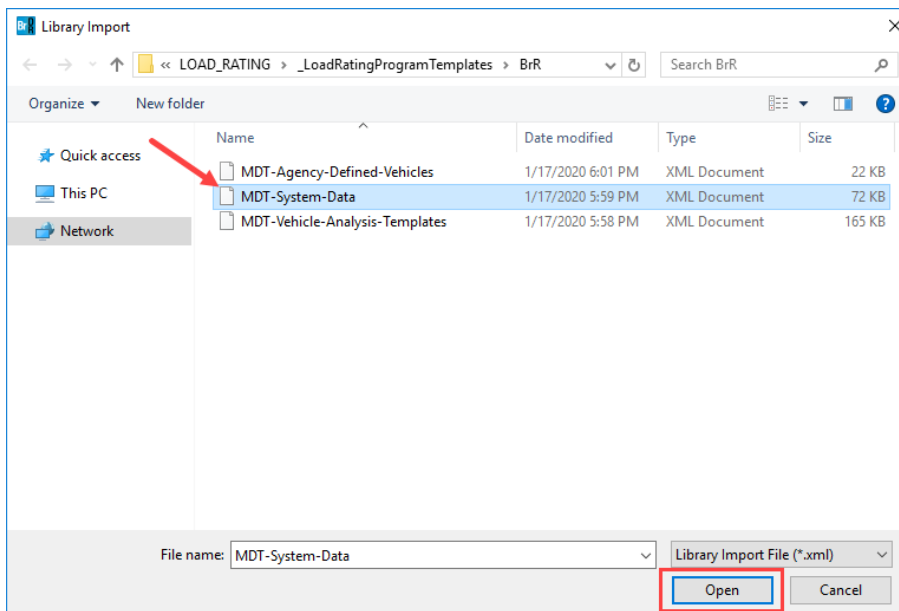

Instructions for Importing System Data

- Click on the double arrows to import all templates in the **Unit Tolerances, BrM Parameters, and Custom Agency Field Labels** folders. (Tip – you can also select a folder under the “System Data Items” column, and use the single arrow to import only the highlighted template.) Click **Import**.

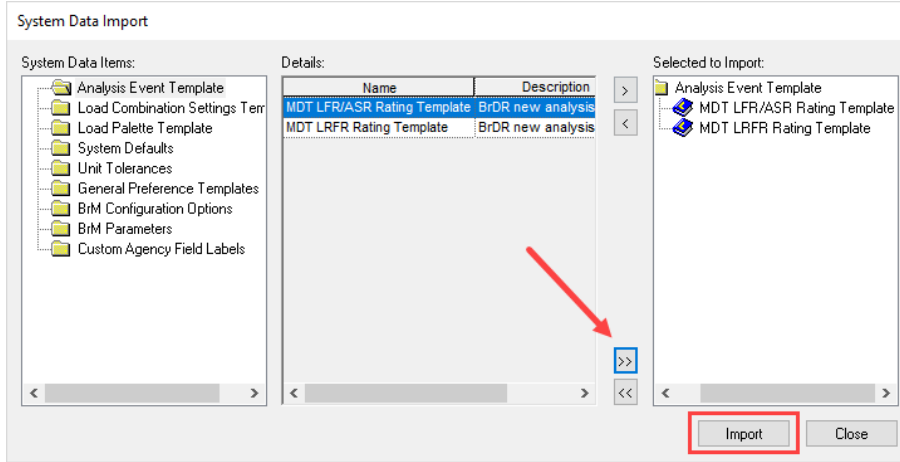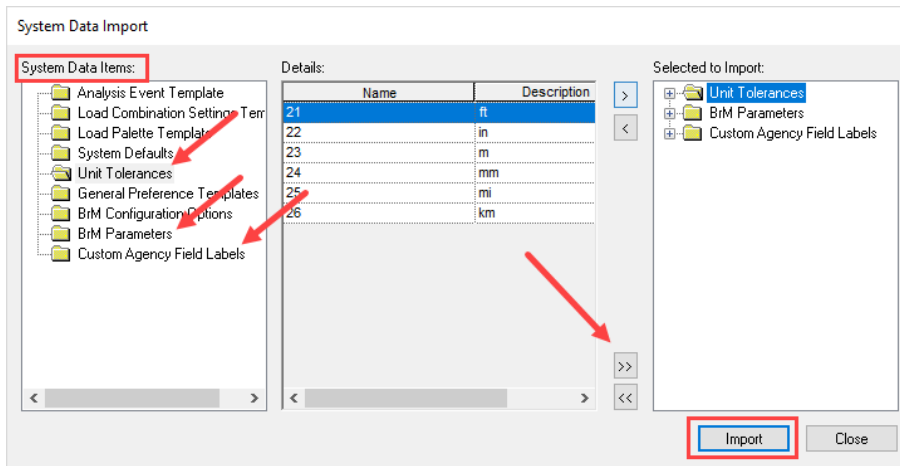

- If successful, the imported templates will be visible in options in the Configurations Browser , within their respective folders.

