



MONTANA

Department of Transportation

February
2025

MDT Civil 3D State Kit -
Adjust Profile View Range

YOUTUBE VIDEO DOCUMENTATION

TABLE OF CONTENTS

| | |
|--------------------------------------|----------|
| Table of Contents | 2 |
| Overview | 3 |
| Companion Documentation | 3 |
| Using the Command..... | 3 |

OVERVIEW

The **Adjust Profile View Range** command will adjust the minimum and maximum grid elevations for any number of profile views.

The **Adjust Profile View Range** command is developed and provided by WisDOT.

COMPANION DOCUMENTATION

YouTube Video Link: https://www.youtube.com/watch?v=-trsKp14wIQ&list=PLxseor6l1x1GY4KNF_93eyCRSVeO61OwX&index=2

USING THE COMMAND

1. Type **MDTProfileViewElevRange** at the command line or press the **Adjust Profile View Range** ribbon button.
2. Select one or more Profile Views.
3. *Enter a Minimum Elevation [Same]*
 - a. Enter a minimum elevation value and press **<enter>**.
 - b. Or select *[Same]* to keep the height the same.
4. *Determine height by [New Elevation] <New>*
 - a. Maximum elevation option – New height
 - i. Select *New*.
 - ii. Enter desired grid height value and press **<enter>**.
 - b. Maximum elevation option – Specific elevation
 - i. Select *Elevation*.
 - ii. Enter desired maximum elevation value and press **<enter>**.
5. Profile View grid(s) will be adjusted accordingly.