

August 2025

MDT Civil 3D State Kit - Move Pipe Along Profile

YOUTUBE VIDEO DOCUMENTATION

## TABLE OF CONTENTS

Table of Contents	2
Overview	3
Companion Documentation	
Using the Command	3

## **OVERVIEW**

The **Move Pipe Along Profile** command will move a pipe end and optionally a connected structure along an alignment/profile to a new elevation and location in a profile view. The new location will also be reflected in plan view.

The **Move Pipe Along Profile** command is developed and provided by the Alaska DOT.

## COMPANION DOCUMENTATION

YouTube Video Link: <a href="https://youtu.be/2EpnVbJYwbw?si=cynG-82lBzvqX83G">https://youtu.be/2EpnVbJYwbw?si=cynG-82lBzvqX83G</a>

## **USING THE COMMAND**

Move a pipe start or end to a new elevation and location.

- 1. Type MDTPipeAlongProfile at the command line or press the Move Pipe Along Profile ribbon button.
- 2. Select a pipe in a Profile View.
- 3. Select End Invert Location or Enter Grade [Start Crown Grade]:
  - a. (Optional) Select Start to place the **start** location instead.
  - b. (Optional) Select Crown to place by the **crown** of the pipe instead of the invert.
  - c. (Optional) Select Grade to lock in a pipe slope value.
    - i. Enter Grade from Start to End Point in % Format <2.0000>:
    - ii. Select End Location, or Reset/Unlock Grade [Unlock Grade/Grade]:
- 4. Pick a point in the profile view for the pipe location.
- 5. Would you like to move structure <Structure Name> ? [Yes No] <Yes>:
  - a. Choose whether to move a connected structure along with the pipe.
- 6. Pipe start or end (and optionally, structure) location will be updated in profile view and plan view.